

How to connect an Atlas Scientific Serial Port Connector to your microcontroller

The Atlas Scientific Serial Port Connector is based on the 74HC4052 Mux/Demux IC. This device is designed to specifically connect up to four asynchronous serial UART devices into one single microcontrollers UART RX/TX pins.

The Atlas Scientific Serial Port Connector is broken up into two sections, a control section and an output section.

Control section

Output section





Output section

The output section consists of four output blocks. These blocks are marked **Y0 • Y1 • Y2 • Y3**



Each of these four output blocks consist of an RX and TX pin. Each one of these RX/TX pins connects to your peripheral device.

On this breakout board TX and RX from the output blocks Y0 to Y3 connect to your peripheral devices matching pin. TX is connected to TX and RX is connected to RX.



This is correct

Atlas-Scientific.com



Control section

PIN NAME	PIN FUNCTION			
VCC	supply voltage			
S1	Output direction control 1			
SO	Output direction control 0			
E	Enable			
RX	Data in			
ТХ	Data out			
GND	Supply ground			
NC	Not connect			



VCC AND GROUND

Vcc can be as high as 5 volts. One should keep VCC and GND tied to the main power bus of your system.





RX / TX

The main RX and TX pins are connected to the microcontrollers TX and RX pins respectively. This main RX / TX block is called the Z block and is identified by a Z on the breakout boards silkscreen.

It is important to remember that on the control side of the Serial Port Connector TX is connected to RX and RX is connected to TX.





SO and **S1**

S0 and S1 are the control pins which guide the RX and TX signals to the correct output section (block Y0-Y3). It's best to think of them as switches, switch 0 and switch 1. These two switches have 4 possible combinations.

Comb.	Switch 0	Switch 1	Output Block	Comb.	Switch 0	Switch 1	Output Block
1	OFF	OFF	Y0=ON	2	ON	OFF	Y1=ON
	1	1					
Comb.	Switch 0	Switch 1	Output Block	Comb.	Switch 0	Switch 1	Output Block

Comb.	S0	S 1	Block
1	0	0	Y0
2	1	0	Y1
3	0	1	Y2
4	1	1	Y3

The E pin

If you have no interest in using the features of the E pin you must connect it to ground. The E pin cannot be left floating.



The pin marked "E" is the enable line. The E pin cannot be left floating. It must be connected to either a microcontroller or a ground line. E is the enable pin and it is an active low pin. This means that when E is set to 0 by a microcontroller or is pulled to ground the Serial Port Connector is working. If E is pulled high or set to 1 by a microcontroller the Serial Port Connector is not working.

At first this may seem unnecessary however, use of the E pin can allow you to control 8 or more devices with just 1 serial port and two or more Serial Port Connectors.



Atlas-Scientific.com



How to make a Footprint for the Atlas Scientific Serial Port Connector



1. In your CAD software place an 8 position header.



2. Place two, 8 position header at both left and right of the 8 position header as shown.

0	•	•	•	٠	•	ullet	0
0							0
0							0
0							0
0							0
0							0
0							0
0							0

 Once this is done you can delete the horizontal 8 position header. Make sure that the two, 8 position headers are 21.6mm (0.8") apart from each other.



Atlas-Scientific.com

